


1. Press the power button.
2. Immediately after the Power-On Self-Test (POST), and you see the blue Windows logo, press the power button again to shut down.
3. Repeat steps 1 and 2 twice. In the third restart, Windows 11 should enter into the Windows Recovery Environment (Windows RE), where many diagnostics will be performed to fix any booting issues.



4. Click the Advanced Options button.
5. Click on Troubleshoot.
6. Click on Advanced options again.
7. Click the System Restore option.

← Advanced options

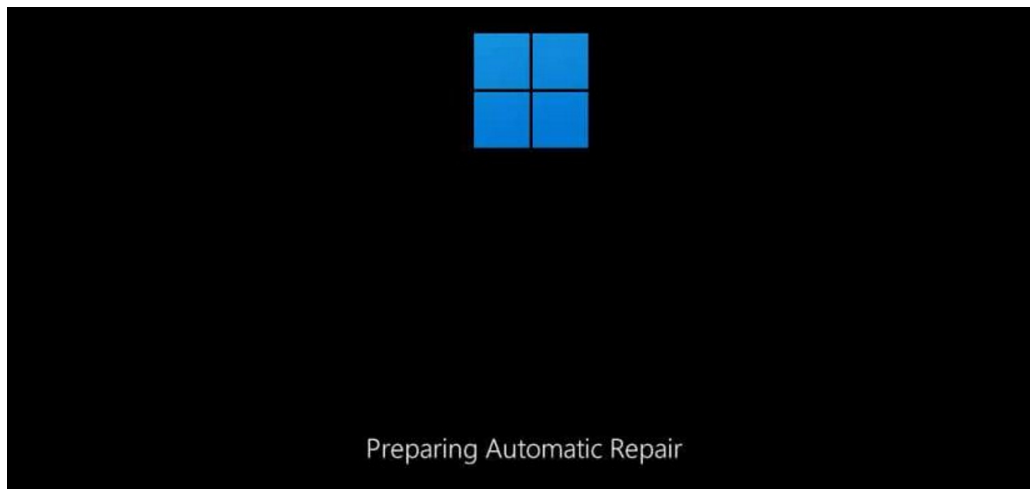

Startup Repair

Fix problems that keep Windows from loading



Uninstall Updates

Remove recently installed quality or feature updates from Windows



Startup Settings

Change Windows startup behavior



UEFI Firmware Settings

Change settings in your PC's UEFI firmware



Command Prompt

Use the Command Prompt for advanced troubleshooting




System Restore

Use a restore point recorded on your PC to restore Windows

8. Click the Next button.

9. Select the restore point to recover your installation.

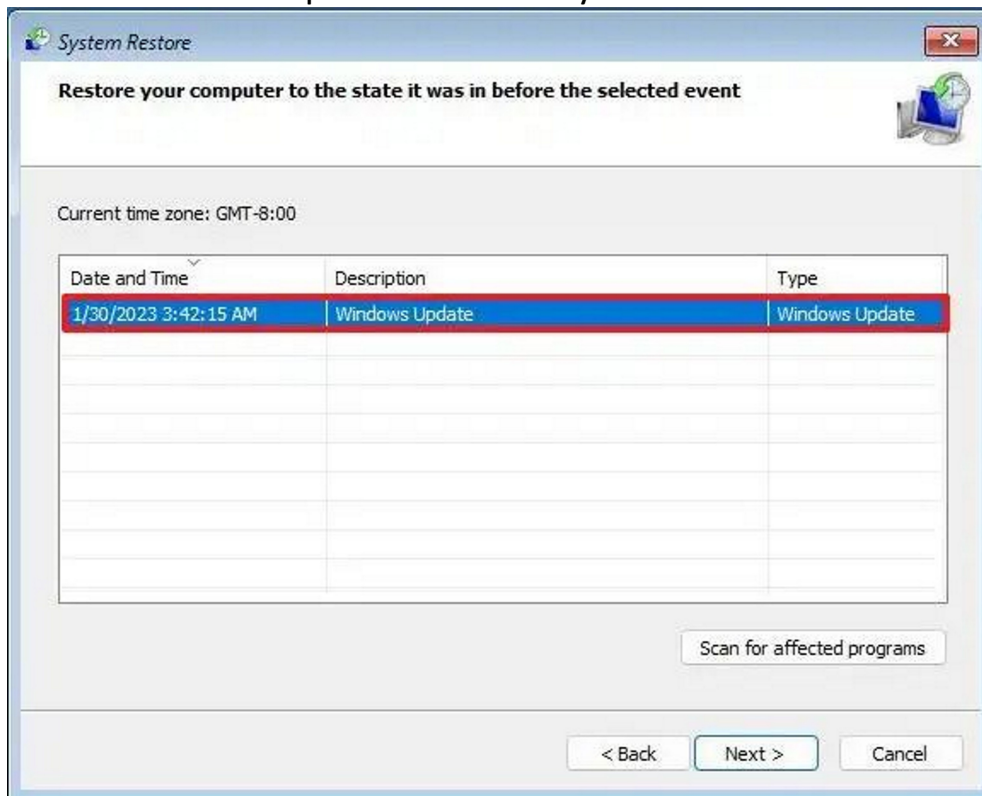

10. (Optional) Click the “Scan for affected programs” button.

11. Confirm the apps you may need to reinstall after applying the restore point.

12. Click the Close button.

13. Click the Finish button.